

Fig. 6 - Rinse in running water said parts 265) and 267) and clean with a toothpick water inlet and outlet openings provided on part 267).

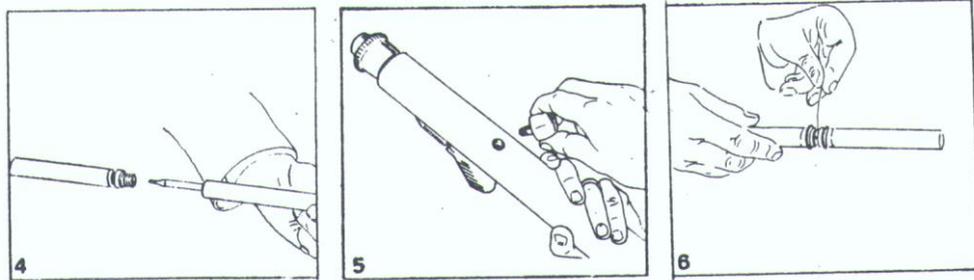


Fig. 7 - and on part 265)

Fig. 8 - Check proper operation of seal gasket 290) and replace it, if necessary. When reassembling, remember that the hollow part must be arranged as shown in the picture.

Assembling

Fig. 9 - To assemble, repeat all former steps on reverse. Whoever fits the compressor to the gun for the first time, should remove the lung head locking screw 326) from the tank. It is essential to check that the compressor front support is located in the middle of two notches provided on the compressor tube itself.

